



TELIS SOLIRIS TRANSMITTER

Preliminary Operating Instructions

DESCRIPTION



Catalog No: 6301017

The Telis Soliris Transmitter is a single channel hand-held transmitter compatible with the Soliris Receiver. Commands are transmitted by radio frequency at 433.42 MHz.

- Power: 3V lithium battery, CR 2430 type
- Operating temperature: +5°C/41°F to +40°C/104°F


PROGRAMMING

A. INITIAL PROGRAMMING

1. Set the Soliris Receiver into programming mode by pressing the programming button on the receiver until its programming LED lights (about 5 seconds).
2. Press and release the programming button on the back of the Telis Soliris transmitter to be memorized. The programming LED on the Receiver will blink indicating that the transmitter has been memorized.

B. REMOVING A TRANSMITTER FROM THE MEMORY OF THE RECEIVER

1. Set the Soliris Receiver into programming mode by pressing the programming button on the receiver until its LED lights.
2. Press and release the programming button on the back of the Telis Soliris to be removed. When the LED on the Receiver blinks, the transmitter has been deleted from memory.

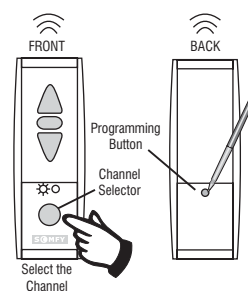

NOTE: It is not recommended to program more than one Telis Soliris Transmitter into the memory of the Soliris Receiver.

OPERATION

A. ACTIVATING DIRECTIONS

1. Pressing the UP or DOWN buttons will retract or extend an awning.
2. Pressing the center button has two functions. If the window treatment is in motion, pressing the center button will STOP it. If the awning is at either upper or lower limit, pressing the center button will bring it to the preset intermediate position.

B. WIND/SUN CONFIGURATION

1. Pressing the configuration button briefly will display the current mode of the transmitter.
2. Pressing and holding the configuration button (at least 2 seconds) will change the mode. The corresponding LED will light.
3. When the WIND LED is lit, the Soliris Receiver is set to activate only on the wind settings or from the transmitter.
4. When the WIND/SUN LED is lit, the receiver is set to activate on both sun and wind settings as well as from the transmitter.

Battery Life

The Telis Soliris Transmitter is powered by a 3V battery (type 2430) which provides about 3 years operation assuming 4 operations per day. When the battery becomes discharged, the control LED no longer lights up when a command is sent, and the command is not carried out.

How to Replace the Battery

1. Remove the back cover of the transmitter.
 2. Slide the battery out of its holder by pushing it with a screwdriver.
 3. Insert the new battery, maintaining its correct polarity.
- NOTE: Do not throw the battery in the trash, but dispose of it properly.

SOMFY CANADA

6315 Shawson Drive, Unit #1
Mississauga, Ontario L5T1J2

SOMFY SYSTEMS, INC.

47 Commerce Drive
Cranbury, NJ 08512

SOMFY MEXICO S.A. De C.V.

Calle 3 No.47, Loc.E-5
Fracc Ind. Alce Blanco
Nau., Edo. de Mex C.P. 53370, Mex